


## Assembly Instructions

(tools required: Phillips head screwdriver, hammer and tape measure)

Butt the two Roof pieces together as shown then line up holes and attach Star (longest point down) onto the front side and Brace (top of curve up) onto the back side using four Machine Screws, Washers and Wing Nuts. Line up holes and attach an Upright onto the back side of each Roof piece using four Machine Screws, Washers and Wing Nuts. Then lay Stable Assembly and Characters face down on a clean flat surface. Locate two Small Stakes and four matching Clamps on the bottom of Joseph, Mary and Baby Jesus and one Large Stake and two matching Clamps at the bottom of each Upright as shown in the diagram and attach with screws provided. Screw extra screw in place above each stake to prevent it from sliding. NOTE: Yard Stake screws go into the plastic material using only moderate pressure without requiring pilot holes. Snug screws firm but do not over tighten. DO NOT USE AN ELECTRIC DRILL/DRIVER. Choose a location in your yard for your Nativity Display. Stand each piece up vertically and push straight down forcing the steel stakes into soft ground until the bottom rests on the lawn. For hard and frozen ground, remove top screws, loosen clamp screws slightly so stakes slide up, position pieces, pound stakes into ground using a hammer and a block of wood then retighten screws.



Included is a Display Kit consisting of 8 Threaded Machine Screws, 8 Washers, 8 Wing Nuts, 6 Small Yard Stakes, 12 Small Yard Stake Clamps, 2 Large Yard Stakes, 4 Large Yard Stake Clamps and 40 Clamp Screws.

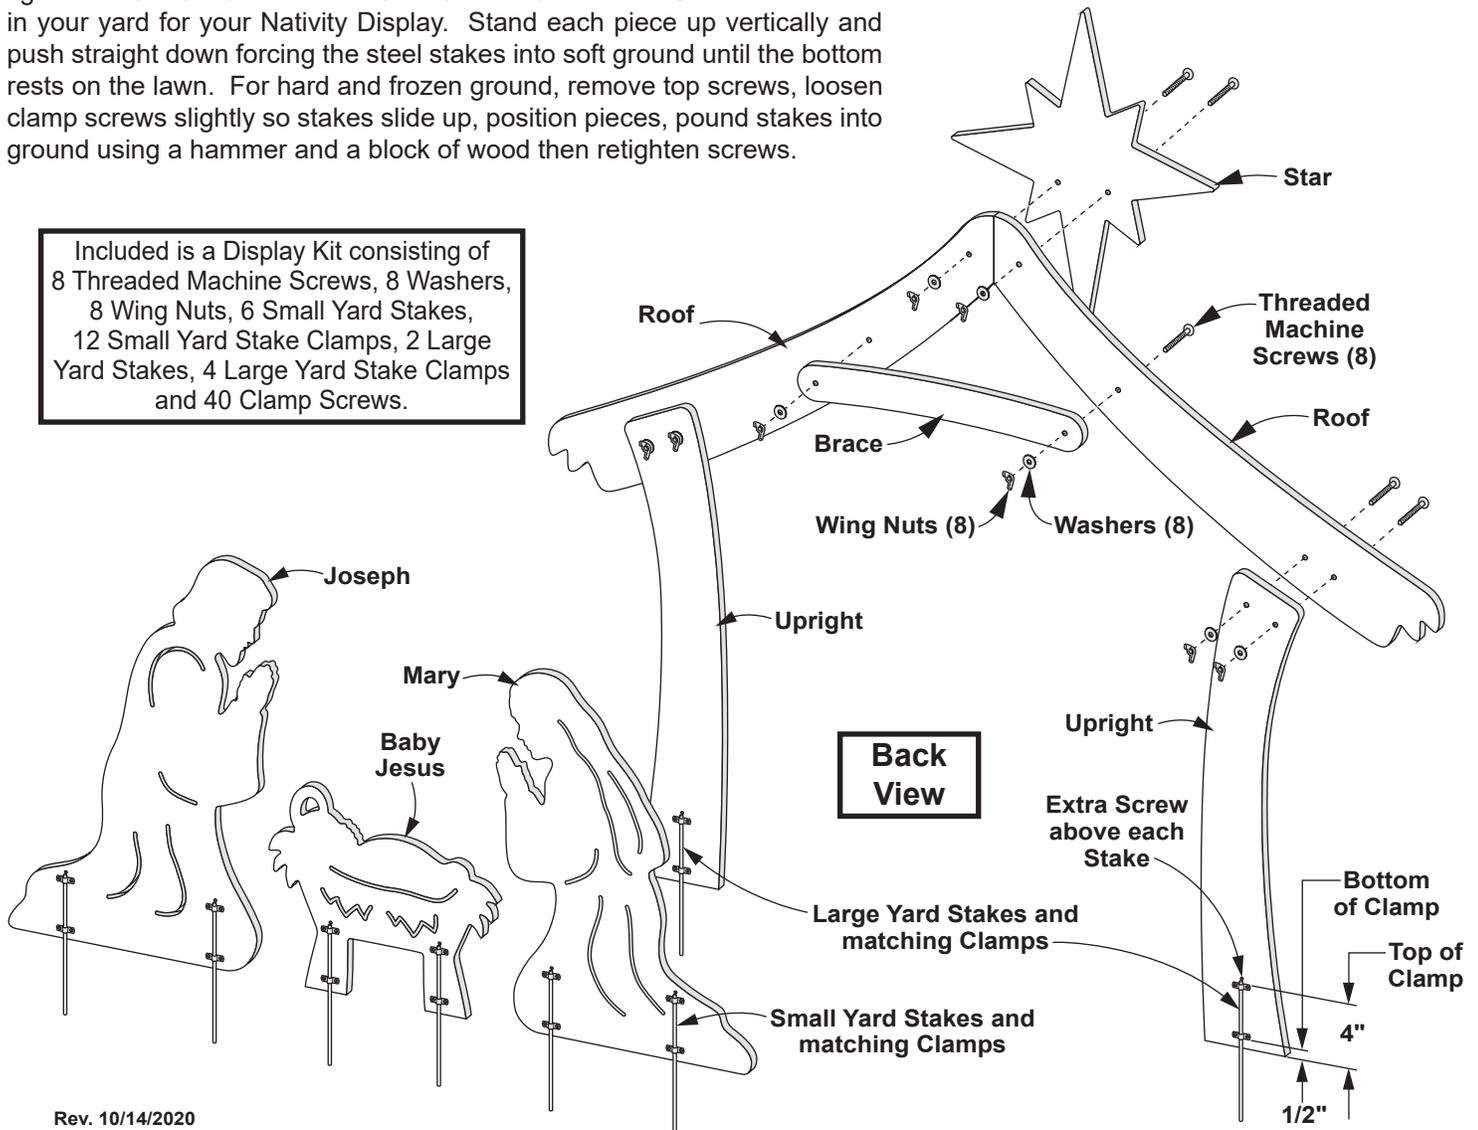

Rev. 10/14/2020

Your Nativity is made from 15mm (.591") thick PVC plastic board that will hold up outdoors for many seasons. Disassemble, clean off dust and dirt with soapy water, then rinse and dry all pieces before storing in the off season.